

## **VF 610 Visible Fault Locator Operation & Service**

### **-Operation**

**Power** – To turn the VF610 on, depress the PWR button. To turn the VF610 off, press the button again.

**Optical Output** – The VF610 is factory calibrated @ -5.0 dBm and is equipped with a 2.5mm universal connector output.

**AVOID LOOKING DIRECTLY AT ANY OPTICAL PORT.**

**2Hz Output** – To modulate the VF610 @ 2Hz place the slide switch in the 2Hz position.

### **- Service**

Low Battery condition exists when the **LOW BAT** LED flashes in CW mode. VF610 operates from a long life CR 2, 3V Lithium Battery.

**Calibration / Repair** – Please call ODM Inc @ 603-524-8350 or visit [www.odm-inc.com](http://www.odm-inc.com)

**THIS PRODUCT COMPLIES WITH 21 CFR 1040.10 & 1040.11**

VF610 – 0306 Rev B